

Adjustable Vibration Isolation Instructions:

- 1.) Set roof curb or adapter
- 2.) Set Isolation Rail – Align inside walls then secure as necessary.
- 3.) Internal springs are rated and placed according to unit weight and center of gravity and should not require adjusting. However, If the unit is not sitting as desired you can adjust the springs as follows:
 - a. Find the lowest point that you want to raise. The springs are shipped in the lowest position and are most effective when lifting.
 - b. Remove the cover on the spring access closest to the low point and the spring access covers on each side closest to this point.
 - c. The spring adjustment requires a 13/16” or adjustable wrench turned clockwise for lift. Adjust as necessary.



-
-
-
- d. Replace spring access covers and seal as necessary to ensure water cannot leak behind the cover.